STAPLES

Don't forget:

- Refer to the enclosed list of some of the 1,000+ words and names you can use for your combination. Or choose any other word, name, or letter combination that works with the letters on the tumblers.
- When choosing a word, you can use any combination of the raised and flat letters.
- Record your secret word combination in a place you'll remember. Once the combination is set, you won't be able to open your WordLock™ without using the right word.
- For best security, change your combination often and keep it protected.

Questions?

Call our Product Support experts during weekday business hours: **1-800-425-0049**

Or visit us online: **www.product-support-staples.com**

store 1-800-STAPLES | **catalog** 1-800-333-3330 | **online** www.staples.com

Staples® WordLock™ **easy instructions**

We're here to help!

Product Support: 1-800-425-0049

Here are more than 1,000 words and names you can choose for your Staples® WordLock™ combination:

STAY	SINCE	SALTY	MITCH	MATCH	LOSE	LEAN	JOIN	ELLYN	DRINK	DELI	CRATE	CHINE	CANAL	BODE	BEAN	ANTEANT
STEAD	SINS	SANE	MITE	MATE	LOSS	LEANA	JOLLY	ELSE	DUAL	DELIA	CREAK	CHLOE	CANE	BODY	BECCA	IANTS
STEAK	SIRE	SARA	MITT	MATT	LOST	LEANN	JOLT	ELSIE	DUANE	DELL	CREED	CHRIS	CANOE	BOIL	BEDS	ANTSY
STEAL	SIREN	SARAH	MOAT	MATTE	LOTS	LEASE	JONAH	ELTON	DUCT	DELTA	CREEK	CHAO	CANON	BOLT	BEECH	ARCS
STEED	SISAL	SARI	MODAL	MATTS	LUCAS	LEASH	JORI	ENDS	DUDE	DENS	CRIED	CILIA	CANS	BONE	BEEN	AREA
STEEL	SITE	SASS	MODE	MEAL	LUCID	LEECH	JORY	EONS	DUDS	DENSE	CRIES	CINCH	CANT	BONNY	BEES	ARENA
STEIN	SITS	SASSY	MODEL	MEAN	LUCY	LEES	JOSE	ERAS	DUEL	DENT	CULL	CIRCA	CARA	BONY	BEET	ARIAARIE
STICK	SLACK	SATE	MOLE	MEANS	LUIS	LEIS	JOSES	ERASE	DUES	DENY	CURE	CITE CITY	CARE	BORN	BELAY	L ARISE
STILL	SLASH	SATIN	MOLLY	MEAT	LULL	LENS	JUAN	ERIC	DUET	DEREK	CURL	CLAN	CARL	BORNE	BELIE	ARNIE
STRAY	SLAT	SEAL	MONEY	MEATY	LUNCH	LENT	JUDE	ERICA	DULCE	DESI	CURLY	CLANK	CARLA	BOSS	BELL	ARRAY
SUDS	SLATE	SEAN	MONO	MECCA	LURCH	LESLY	JUDO	ERIN	DULL	DIAL	CURT	CLASH	CARLY	BRACE	BELLA	ARTS
SUDSY	SLAY	SEAT	MONTH	MEDAL	LURE	LESS	JUDY		DULY	DIANA	CUTE	CLASS	CARNY	BRAID	BELLE	ARTY
SUET	SLEEK	SECT	MORAL	MEDIA	LUTE	LEST	JUICE	**J words include:**	DUNE	DIANE	CUTIE	CLAY	CAROL	BRAIN	BELLY	ATLAS
SUIT	SLICE	SEDAN	MORE	MEET		LETS	JUICY	JACY	DUST	DICE	CUTS	CLEAN	CARS	BRAN	BELT	AUNT
SUITE	SLICK	SEEN	MORN	MELON	**M words include:**	LIDO	JULIA	JADE	DUSTY	DICEY		CLEO	CART	BRAND	BENCH	AURA
SULLY	SLINK	SEINE	MOSEY	MELT	MACE	LIDS LIEN	JULIE	JADEN	DUTCH	DIET DILL	**D words include:**	CLICK	CASE	BRASS	BENNY	AURAL
SUNNY	SLIT	SELL	MOSS	MENS	MADE	LIES	JUNE	JADYN	DUTY	DINA	DADS	CLINK	CASEY	BREAD	BENT	AUTO
SURE	SNACK	SENSE	MOSSY	MERCY	MADLY	LILT	JURY	JANA		DINE	DAILY	COACH	CAST	BREAK	BERTH	
SUSAN	SNAIL	SENT	MOST	MERE	MAIL	LILY	JUST	JANE	**E words include:**	DINO	DAIS	COAL	CATCH	BREED	BERYL	**B words include:**
SUSIE	SNEAK	SHACK	MOTEL	MERLE	MAIN	LINE		JARED	EARL	DIRT	DAISY	COAT	CATS	BRET	BEST	BACON
T words include:	SODA	SHALE	MULCH	MESA	MALE	LINED	**L words include:**	JARS	EARLY	DIRTY	DALE	COCO	CEASE	BRIAN	BETA	BAIL BAIT
TACO	SOIL	SHALL	MULE	MESS	MALL	LINEN	LACE	JASON	EARN	DISC	DALLY	COCOA	CECIL	BRICK	BETS	BALE
TACT	SOLE	SHANA	MULL	MESSY	MALT	LINES	LACIE	JEAN	EARS	DITCH	DANA	CODA	CEDE	BRINE	BETTY	BALL
TAIL	SOLID	SHANE	MUNCH	METAL	MALTY	LINT	LACLADE	JEANS	EARTH	DITTY	DANCE	CODE	CELIA	BRINK	BIDE	BALSA
TAILS	SOLO	SHANK	MURAL	METE	MANE	LIRA	LADEN	JELL	EASE	DOCS	DANI	CODED	CELL	BRISK	BIDSBILL	BANS
TALC	SONIA	SHAY	MUSE	MICA	MANIA	LISA	LADLE	JELLY	EASEL	DOES	DANNY	CODY	CENT	BUDS	BILLY	BARE
TALE	SONNY	SHEEN	MUST	MICE	MANNA	LISAS	LADS	JENINA	EAST	DOILY	DARCY	COIL	CHAIN	BUILD	BINS	BARN
TALL	SONS	SHEIK	MUTE	MIDI	MANSE	LISLE	LADY	JENNY	EASY	DOLE	DARE	COIN	CHALK	BULL	BIRCH	BARON
TALLY	SORE	SHEL	MUTED	MILE	MANTA	LISSA	LAILA	JESS	EATEN	DOLL	DARN	COLA	CHAOS	BUNCH	BIRTH	BARS
TALON	SORT	SHELL	MUTT	MILL	MANY	LIST	LAIN	JESSE	EATS	DOLLY	DART	COLE	CHAS	BUNNY	BISON	BART
TANIA	STACK	SHIED		MILT	MARC	LISTS	LAINE	JEST	EELS	DONE	DARTS	COLT	CHASE	BUNT	BITE BITS	BASE
TANYA	STACY	SHILL	**S words include:**	MINCE	MARCH	LITE	LANA	JETS	ELAN	DORIS	DARYL	CONE	CHAT	BURL	BITTY	BASES
TARA	STAID	SHIN	SADIE	MINE	MARE	LOAN	LANCE	JETTY	ELATE	DORY	DATA	CORA	CHECK	BURLY	BLACK	BASIL
TARS	STAIN	SHINE	SADLY	MINI	MARIA	LOCAL	LANE	JILL	ELENA	DOSE	DATE	CORAL	CHEEK	BURN	BLAND	BASIN
TART	STALE	SHINY	SAIL	MINT	MARIE	LOCO	LANI	JILLY	ELISA	DOTE	DATED	CORE	CHESS	BURY	BLANK	BASIS
TASTE	STALK	SHRED	SALAD	MINTY	MARSH	LODE	LANIE	JOAN	ELISE	DOTS	DEAL	COREY	CHIC	BUSY	BLASE	BASS
TASTY	STALL	SIDE	SALE	MIRE	MART	LOLA	LARS	JOANN	ELITE	DOTTY	DEAN	CORN	CHICA	BUTCH	BLEND	BASTE
TEACH	STAND	SIDED	SALES	MIRTH	MARY	LOLL	LASS	JODI	ELLA	DRAIN	DECAL	CORY	CHILD	BUTTE	BLESS	BATCH
TEAL	STASH	SIDLE	SALLY	MISS	MARYS	LONE	LAST	JODIE	ELLE	DRANK	DECOY	COST	CHILE		BLIND	BATED
TEEN	STAT	SILL	SALON	MISSY	MASON	LORE	LATCH	JODY	ELLEN	DRESS	DEENA	COSTS	CHILL	**C words include:**	BLINK	BATON
TEENS	STATE	SILLY	SALSA	MIST	MASS	LORI	LATE	JOEL	ELLIE	DRIED	DEITY	COTS	CHIN	CADY	BLISS	BATS
	STATS	SILO SILT	SALT	MISTY	MAST	LORIS	LEACH	JOEY	ELLY	DRILL	DELAY	CRANE	CHINA	CALL	BOAT	BEACH

A words include: AANNE, AANNA, AANTA, AANSE, AANSA, AANSY, AANOY, AANOI, ALTO, ALSO, ALLY, ALLOY, ALLIE, ALLEY, ALLEN, ALLYA, ALLSE, ALLSA, ALLEN, ALLCE, ALLAS, ALLEC, ALLAS, ALLANA, ALLAN, AISLE, AIRY, AIRS, AIDEN, AIDE, AIDAN, AHEAD, AARON

easy instructions for using your Staples® WordLock™ and setting your own combination

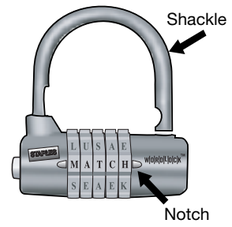

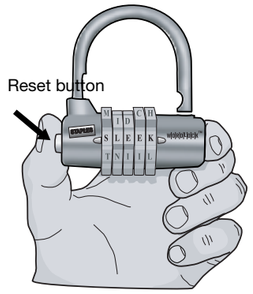

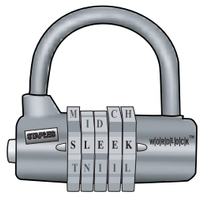

English

Initial Use: WordLock™ is preset to initially open and close at **M-A-T-C-H. To open, set the tumblers to spell M-A-T-C-H and pull up on the shackle**. Make sure the tumblers are aligned with the notches or the lock won't open.

WARNING: When open, pressing the reset button may inadvertently set a random password instead of your specified choice.

Setting your own combination:

1. To change the preset combination, **decide on a four- or five-letter word** that can be spelled with the letters on the WordLock™ tumblers (each tumbler contains 10 letters).
2. **With the shackle open, press and hold the reset button** on the left side of the lock. **IMPORTANT: Press and hold the reset button the entire time you are setting the tumblers to your new word. Failure to do so could cause you to inadvertently set a random password instead of your specified choice.**
3. **Set the tumblers to the new word of your choice.** To choose a four-letter combination, set the last tumbler to the blank area.
4. **Release the reset button** only when you are ready to confirm your selected word combination.

To lock: set the tumblers to your selected combination, close the shackle until you hear a click, and scramble the tumblers.

To unlock: set the tumblers to your selected combination and open the shackle.

Español

Primer Uso: WordLock™ ha sido previamente configurado para abrir y cerrar con la palabra **M-A-T-C-H. Para abrir, gire los pernos de combinación para deletrear la palabra M-A-T-C-H y jale el gancho.** Asegúrese de que los pernos de combinación estén alineados con las muescas o de lo contrario el candado no abrirá.

ADVERTENCIA: Al abrir, si presiona el botón de reposición puede configurar inadvertidamente una combinación al azar en lugar de la combinación deseada.

Configuración de su combinación:

1. Para cambiar la combinación actual, **elija una palabra de cuatro o cinco letras** que pueda deletrearse utilizando las letras de los pernos de combinación de WordLock™ (cada perno contiene 10 letras).
2. **Con el gancho abierto, presione y mantenga presionado el botón de reposición** del lado izquierda del candado. **IMPORTANTE: Presione y mantenga presionado el botón de reposición durante todo el tiempo que tarde en configurar su nueva combinación con los pernos. De lo contrario, configurará una combinación elegida al azar en lugar de la combinación deseada.**
3. **Configure los pernos con su nueva combinación.** Para elegir una combinación de cuatro letras, configure el último perno de combinación en el área en blanco.
4. **Libere el botón de reposición** únicamente cuando esté listo para confirmar su nueva combinación.

Para cerrar: coloque los pernos en la combinación seleccionada, cierre el gancho hasta que escuche un "clic" y revuelva los pernos de combinación.

Para abrir: coloque los pernos en la combinación seleccionada y abra el gancho.

WordLock™ is a registered trademark and used by permission.

4/05